 


dyson micro 1.5kg

User manual

Dyson micro one point
five kilograms

The Dyson cordless
vacuum cleaner in an
upright position with
the wand and cleaner
head attached.

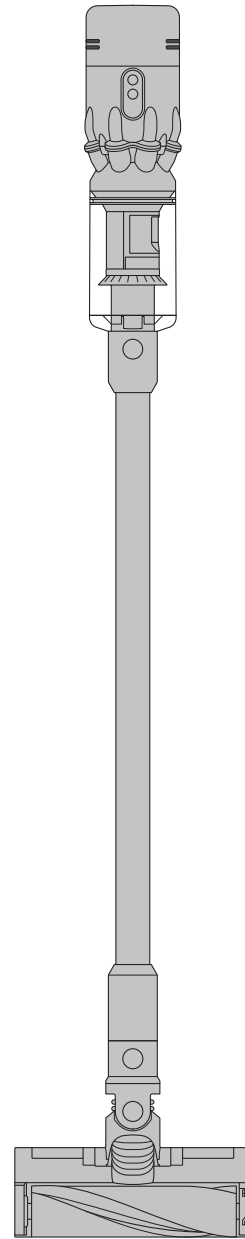

In the box

Getting started

Charging your machine

Caring for your floors

Emptying your bin

Cleaning your bin

Washing your filter

 
Washing your brush bar

Cleaning your tools

Clearing blockages


Looking after your machine

In the box

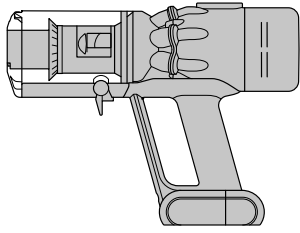

Main body showing the handle and bin attached.

 Vacuum cleaner

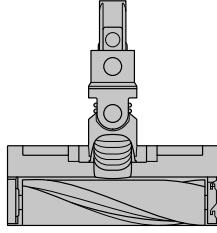

A soft fluffy brush bar housed within the cleaner head. There is an electrical connector end that can attach to the end of the wand or directly to the machine.

Micro Fluffy™ cleaner head

Soft woven nylon and anti-static carbon fibre filaments remove dust from hard floors. Smaller than a standard Fluffy™ cleaner head - with a low profile to reach under furniture.



The narrow connector end at the top, this connects to the bin and the wider end at the bottom that connects to the cleaner head or tool.

Wand



 
The charger is a one piece unit with the plug, connector end and cable.

Charger

Charges your vacuum with or without a dock.

Some tools may not be included.

You can buy additional tools at www.dyson.com.



This tool has a combination of brush head and crevice tool together in one unit. The brush head slides down the crevice tool when needed.

Combi-crevice tool

Two tools in one – narrow nozzle and brush, for quick switching between cleaning and dusting tasks.

 


A long tool with an angled end.

Light pipe crevice tool

Crevice tool with LED lights lets you reach into dark, narrow spaces and see where you're cleaning.

A small cleaner head with a body housing the motor and an electrical connector to attach to the wand or directly to the machine.

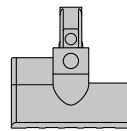

Mini motorised tool

Motorised brush bar, concentrated in a smaller head to remove stubborn dirt from mattresses, upholstery and stairs.

This tool is angled and has a nozzle end.



Worktop tool

Engineered for cleaning kitchen worktops, tables and hard surfaces.

 


A plastic clip that attaches to the wand

Wand clip


Clips to your vacuum's wand to hold tools.

Getting started

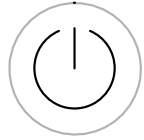


Power button
Press the Power button once for comfortable, continuous cleaning.

 Location of the power button on the base of the handle of the machine.

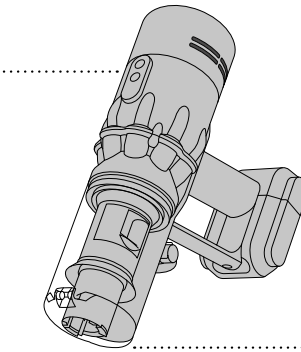

The main body with the power button and mode button at the base of the handle and bin with the bin base closed.

 MAX

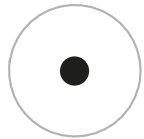

Power modes
Press the button to change power modes.

 
 
Max mode
Delivers maximum power. For intensive cleaning of ground-in dirt.

Eco mode
The optimum balance of power and run time

The connection of the wand onto the main body, with the wand release button aligned with the buttons on the handle of the main body.




The main body of the Dyson vacuum connects to the Dyson Micro Fluffy™ cleaner head fluffy floor tool.

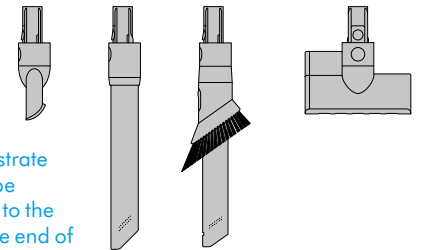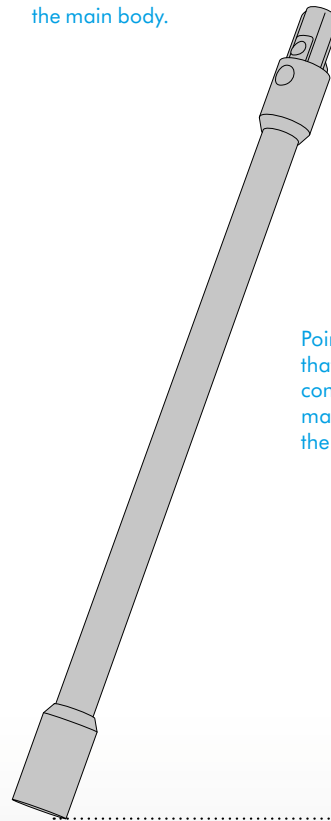

Pointers to demonstrate that the tools can be connected directly to the main body or to the end of the wand.



 The Dyson Micro Fluffy™ cleaner head showing the release button at the flexible neck, connected to the main body of the cleaner head.

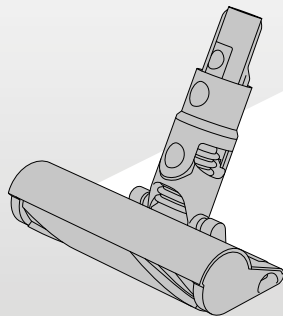

Micro Fluffy™ cleaner head
Soft woven nylon and anti-static carbon fibre filaments remove dust from hard floors. Smaller than a standard Fluffy™ cleaner head - with a low profile to reach under furniture.

Charging your machine

For the best experience, we recommend fully charging your machine, and any additional batteries, as soon as you open the box and after every clean.

The LED light on the end of the handle will flash when the power is running low and you need to put your battery on to charge.

 
Connect the charger directly to the charging point on the base of the handle of your machine. You can also connect to your dock as shown in the installation instructions supplied with your dock.

The LED light on the end of the handle will pulse with a blue LED light when charging, and the light will go out when fully charged.


It can take up to four hours to fully charge your battery. Your battery has been designed to be left on charge.

Your machine won't operate or charge if the ambient temperature is below 5°C (41°F). This is designed to protect both the motor and battery.

You can help prolong the battery life by leaving your machine to cool down before recharging.

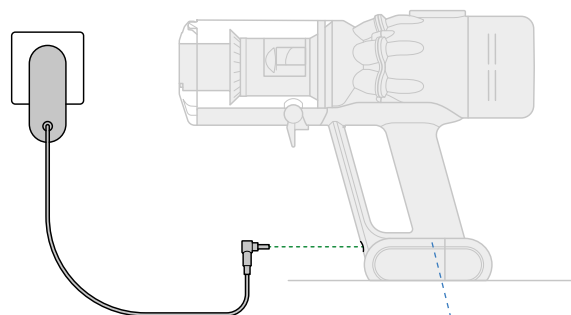

 The charger connected from the power supply directly into the front of the battery.

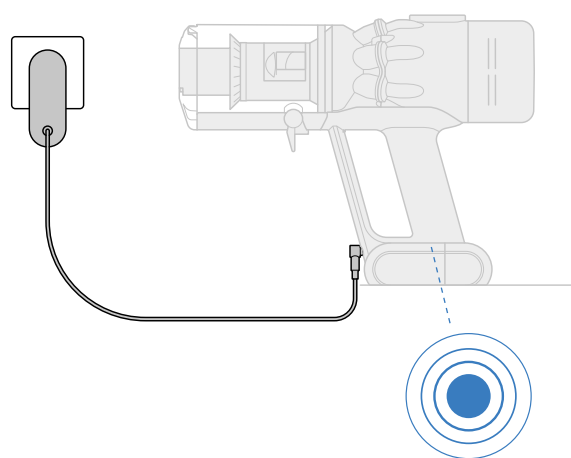

Caring for your floors

Check that the underside of the cleaner head or tool is clean and free from any objects that may cause damage.

Before vacuuming your flooring, rugs, and carpets, check the manufacturer's recommended cleaning instructions.

This machine is designed for use on hard floors. The brush bar on your machine can damage certain flooring. Some rug materials may fuzz if a rotating brush bar is used when vacuuming. If this happens, we recommend vacuuming without the motorised floor tool and consulting with your flooring manufacturer.

Emptying your bin

Empty your bin as soon as the dirt reaches the MAX mark.
You may need to clean the filter more often if you use your machine with a full bin.

Remove your wand

Press the red wand release button, on the top of the wand, and pull the wand away from the bin.

Release the dirt

Hold your vacuum over a bin.

Push the red bin release button, taking care not to press the power button.
The bottom of the bin will open and the shroud will slide down inside the bin, wiping away any dirt.

If the bin doesn't open, check the bin release button is pushed down fully.

To remove the bin for emptying:

If the bin doesn't empty fully, remove the bin and empty the dirt.

Press the red button located on the bin runner to release the bin and slide your bin off the runner.

Minimise dust contact

Cover your bin tightly in a dust proof bag while you empty. Remove the bin carefully, seal the bag tightly and dispose.

Reassemble your machine

If you have removed your bin, slide it back on to the runner. Make sure that the bin and lid are both securely in position.

Push the bin base upwards until the bin and lid both click into place.
Reconnect the wand.


 
The MAX mark on the bin of the machine, showing that the dirt should not be filled over the Max mark when the machine is at the angle of normal use.




Illustration of the bin being emptied into a bag with images demonstrating to take care not to press the trigger when emptying the bin.

 


Illustration of the bin being emptied into a bag.

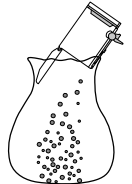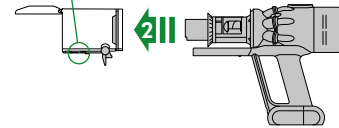

 The bin lid closing with an audible click and the bin being pushed upwards with another click once it is fully in place.

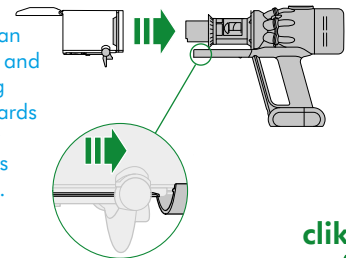

Two images of the bin with arrows showing the bin lid closing and a click symbol and the bin being pushed upwards with another click symbol.

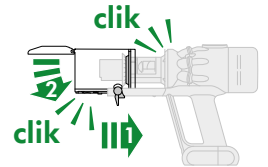 

Cleaning your bin

Don't put any part of your machine in a dishwasher or use detergents, polishes or air fresheners.

Clean your bin

If it is necessary to clean your bin, empty it as shown in the 'Emptying your bin' section.

Press the red button located on the bin runner to release the bin and slide your bin off the runner.

Only clean your bin with a damp cloth.

 
Make sure that the bin and seals are completely dry before replacing.

Replace your bin


Insert the spine on to the bin runner.

Close your bin by pushing the bin base upwards until the bin and bin base click into place.

The bin being removed and the location of the bin release lever on the underside of the bin runner.

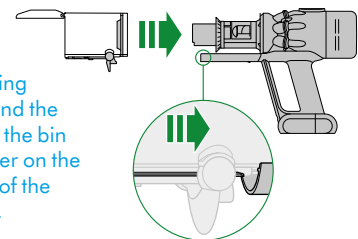

 The bin being pushed back into position on the bin runner.

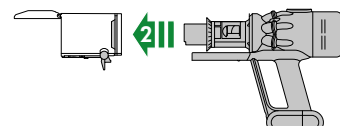

Washing your filter

Wash your filter at least once a month to maintain the best performance.

 
Make sure the filter is completely dry before refitting.

Twist off your filter

Don't put any part of your machine in a dishwasher or use detergents, polishes or air fresheners.

Turn your filter anti-clockwise and pull it away from your machine.

Before washing your filter, tap it gently over a bin to remove any loose dust and debris.

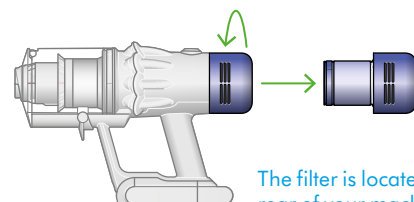

The filter is located at the rear of your machine.

 
Wash your filter

Wash the outside of the filter, rubbing with your fingers to remove the dirt.

Carefully rinse the inside filter, without allowing water to fill the filter.

Repeat these steps until the water runs clear.


Holding the filter by the hard, plastic end, tap the other end over the bin.

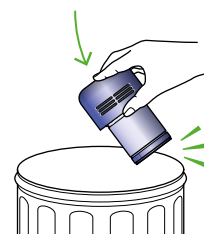


Filter held in upright position, with the wider end in the palm of a hand. Water running from a tap into the narrower end.



 Filter with hand over the open end with arrows showing a shaking motion.

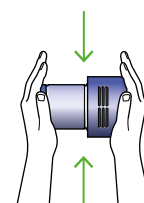

 A hand holding the filter with the narrow end pointing downwards with droplets of water being shaken from the filter and again, with the end pointing downwards shaking water out.

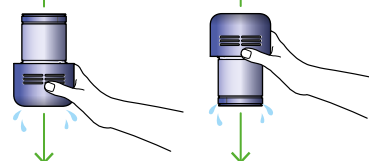

Shake and dry

Empty the filter and shake firmly to remove excess water.

Keep shaking until there's no water coming from the filter.

Place your filter end up, as shown.

Leave your filter to dry for at least 24 hours in a well-ventilated, warm place.

Don't dry your filter in a tumble dryer, microwave or near a naked flame.

Important: your filter must be completely dry before you put it back into the machine. Your machine could be damaged if used with a damp filter.

Refit your filter

To refit your filter, slide it onto the handle and turn it clockwise until it clicks into place.

Your filter may need more frequent washing if you vacuum fine dust, use Max mode frequently or use with the bin full.

The filter is left to dry with the pleated filter end facing upwards.



Washing your brush bar

To maintain optimum performance, check and wash the brush bar regularly.

Remove brush bar

Don't put any part of your machine in a dishwasher or use detergents, polishes or air fresheners.

Press the cleaner head release button to remove it from the wand.

Pull the brush bar off the end cap and put the end cap to one side, don't wash it.

Wash and dry brush bar

Hold your brush bar under cold tap water and gently rub to remove any lint or dirt. Keep washing until the water runs clear.

Stand the brush bar upright and leave for at least 24 hours to dry.

Replace your brush bars

 
Make sure your brush bar is completely dry before refitting.

Reattach the end cap to the brush bar and slide it back into the cleaner head.


Rotate the end cap until it clips securely back into position.

The cleaner head housing is not washable and should only be wiped over with a damp lint-free cloth.


The lock located on the side of the cleaner head, is rotated 90° to release the end cap and the brush bar can be removed.

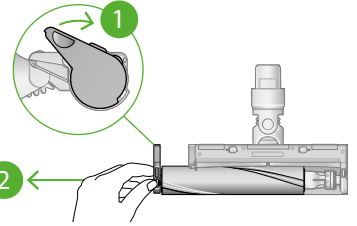

 
The end cap is located at the side of the cleaner head. Push this upwards to unlock the brush bar. Don't wash the end cap.

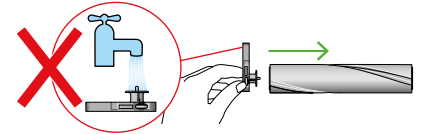

 
The brush bar has an open end and a closed end. Stand upright, with the closed end facing upwards, to dry.

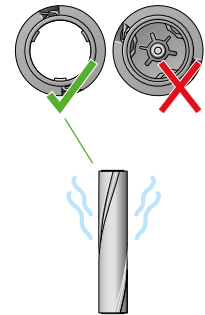

 The brush bar is reinserted into the cleaner head and the end cap is rotated to the locked position.

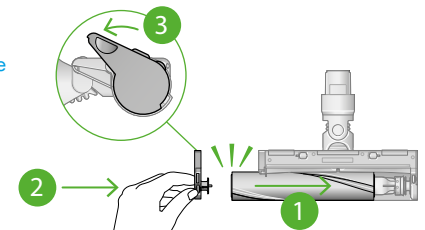

 The end cap should be attached to the cleaner head at an angle less than 90°, any angle greater than this will not allow the end cap to close.




Cleaning your tools


Don't put any part of your machine in a dishwasher or use detergents, polishes or air fresheners.

Wipe with a damp, lint-free cloth, without touching the connector end.

 
Make sure your tools are completely dry before using.




Light pipe crevice tool

 

Combi-crevice tool

 

Worktop tool

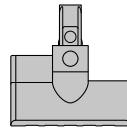 

Mini motorised tool

Clearing blockages

If your machine detects a blockage, the motor will pulse six times. You won't be able to use your machine until the blockage has been cleared.

If you try to use your machine when the motor is pulsing, it will automatically cut out.

 
Leave your machine to cool down before looking for blockages and, for your safety, take care not to touch the power button.

Disconnect your machine from the charger before looking for blockages. Be careful not to touch the trigger and be aware of sharp objects.

Leave your machine to cool down before looking for blockages.

Don't use your machine when looking for blockages as this could cause injury.


With the bin removed, check for blockages, paying particular attention to the air inlet, located at on the right-hand side of the machine just below the point where the bin joins the main body of the machine.

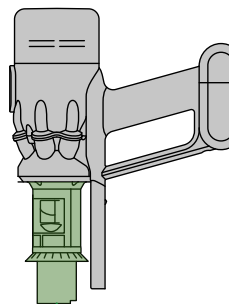


Check for blockages in the filter end and bin ends of the machine.



 The bin being removed and the location of the bin release lever on the underside of the bin runner.



 With the wand removed from the machine, check for blockages at both ends of the wand.

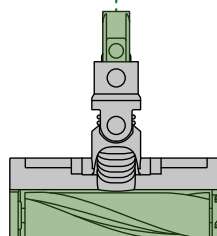

Turn the cleaner head over to check for obstructions on the brush bar and air inlet.

Remove any obstructions from the brush bar.



Looking after your machine

To always get the best performance from your machine, it's important to clean it regularly and check for blockages.

Look after your machine

If your machine is dusty, wipe with a damp lint-free cloth.

Check for blockages in the cleaner head, tools and main body of your machine.

Wash your filter regularly and leave to dry completely.

Don't use detergents or polishes to clean your machine.

Look after your battery

To get the best performance and life from your battery, use Eco mode.

Your machine won't operate or charge if the ambient temperature is below 5°C(41°F). This is designed to protect both the motor and battery.

Your serial numbers

You can register your machine using the serial number found on the bottom of your machine.

You can find your serial numbers on your machine, battery and charger. Use your serial number to register.